www.zoom-room.com

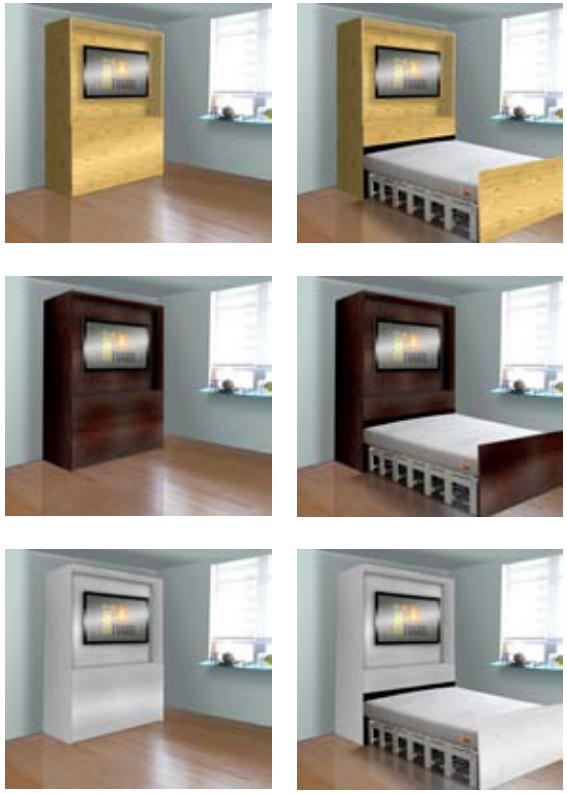

THE STANDARD CENTER CABINET ASSEMBLY DRAWINGS

THANKS FOR PURCHAING ZOOM-ROOM™, AND CONGRATULATIONS ON OWNING THE MOST SOPHISTICATED REMOTE CONTROLLED RETRACTABLE BED SYSTEM.

TO ENSURE PROPER CONSTRUCTION OF YOUR STANDARD LINE OF CABINETRY, FOLLOW ALL DIRECTIONS IN ORDER, AND DO NOT HESITATE TO CONTACT OUR TOLL-FREE NUMBER **(888) 211-1120** IF YOU NEED FURTHER ASSISTANCE. PLEASE CALL BETWEEN 10AM - 5PM EASTERN STANDARD TIME.

FOR SAFETY, THE ASSEMBLY OF THE CABINETS REQUIRES AT LEAST TWO PEOPLE, AS MANY OF THE PANELS AND COMPONENTS ARE HEAVY AND LARGE. ALL INSTALLERS MUST BE ABLE TO CARRY THE COMPONENTS WITHOUT STRAINING, REMEMBER TO USE PROPER LIFTING TECHNIQUE WHEN WORKING WITH HEAVY ITEMS.

CENTER CABINET

FOR FURTHER INFORMATION, PLEASE CONTACT:

ZOOM-ROOM
2121 N. BAYSHORE DR. #709
MIAMI, FL - 33137
T. (888) 211-1120
T. (305) 677-9148
F. (305) 677-9278
INQUIRIES@ZOOM-ROOM.COM
WWW.ZOOM-ROOM.COM

JULY 2013

THE STANDARD CENTER CABINET PANELS

BEFORE YOU START, MAKE SURE YOU HAVE RECEIVED ALL PANELS NEEDED TO CONSTRUCT THE CENTER CABINET

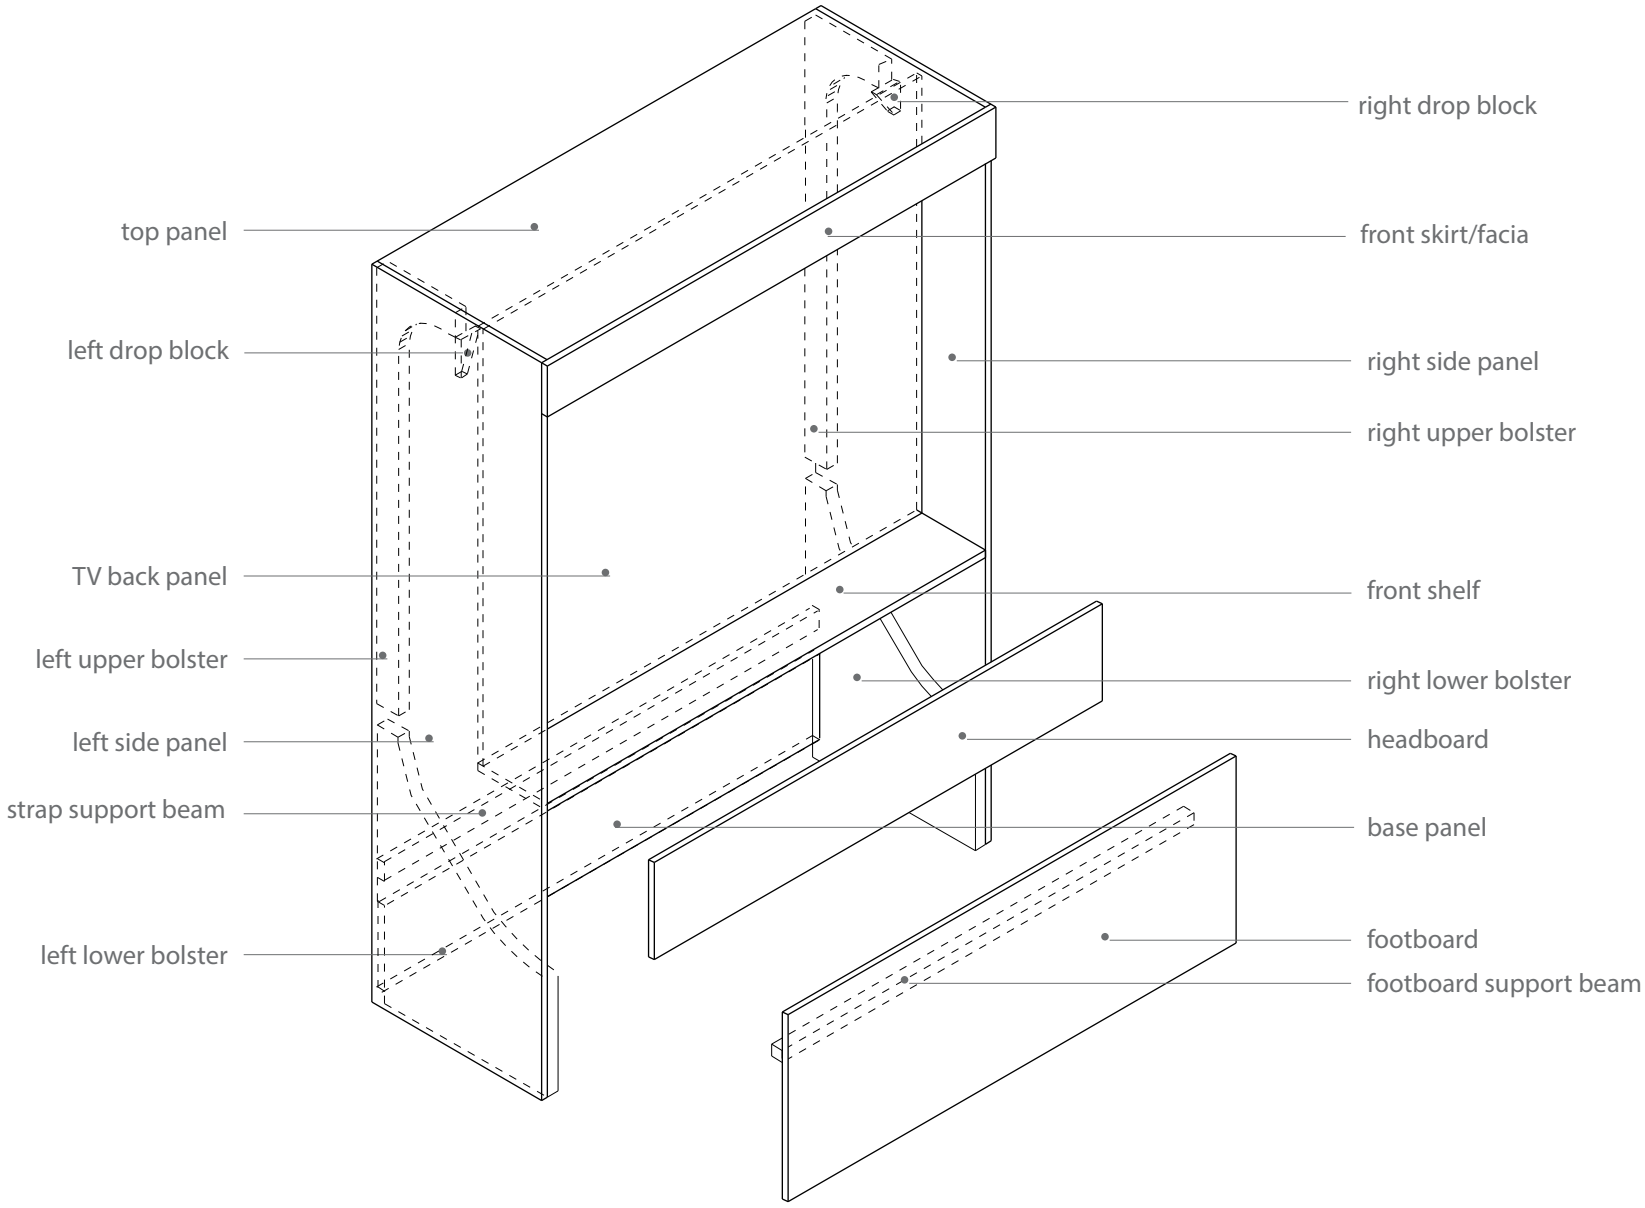

TOOLS NEEDED:



YOU WILL NEED A PHILLIPS SCREWDRIVER TO TIGHTEN THE FASTENERS



YOU WILL NEED A POWER DRILL



YOU WILL NEED A MALLET TO TAP CERTAIN PANELS SECURELY INTO PLACE.

THE STANDARD CENTER CABINET ASSEMBLY HARDWARE

BEFORE YOU BEGIN ASSEMBLING THE PANELS, MAKE SURE ALL REQUIRED HARDWARE IS INCLUDED.

PLEASE SEE THE LEGENDS ON EACH PAGE FOR GUIDANCE ABOUT ATTACHING THE CORRECT HARDWARE TO ITS PROPER PANELS AND LOCATION. NOTE THAT SOME HARDWARE HAS BEEN PRE-INSTALLED.

NOTE: SOME STEPS MAY REQUIRE THE ASSISTANCE OF ANOTHER PERSON.

ATTACHMENT HARDWARE



1 1/4" SCREW QUANTITY x 16
(used to mount lower bolsters)

2" SCREW QUANTITY x 25
(used to mount upper bolsters)



QUARTER-TURN PEG QUANTITY x 32
(used with quarter-turn fasteners to connect panels together)

EURO SCREWS QUANTITY x 44

KEKU CLIPS - connectors used to attach headboard and skirt/facia to cabinet

TOP VIEW

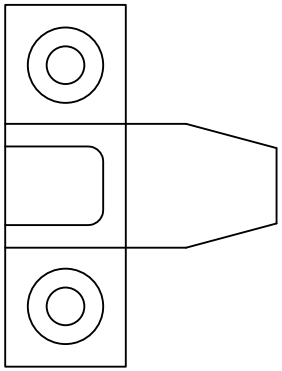

KEKU clip male

TOP VIEW SIDE VIEW

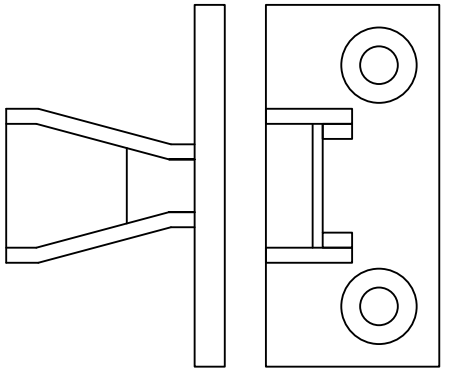

KEKU clip female

QUANTITY x 11 SETS

TOP

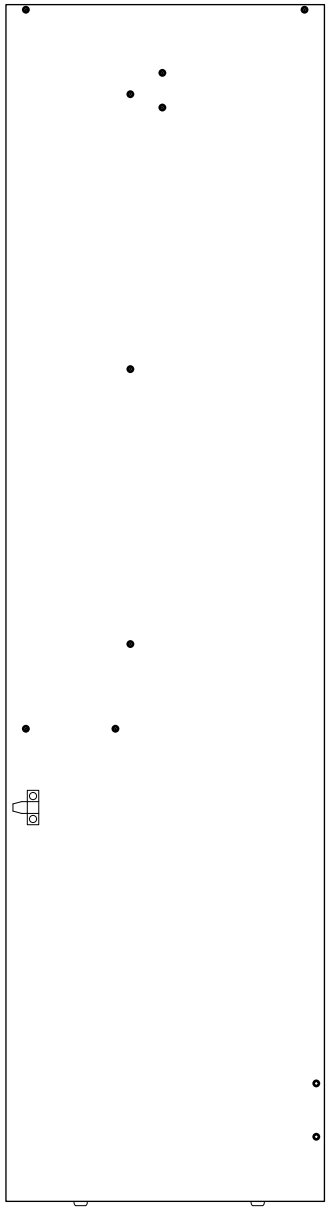

LEFT SIDE
attach male KEKU clips using EURO screws and QUARTER-TURN PEGS as shown

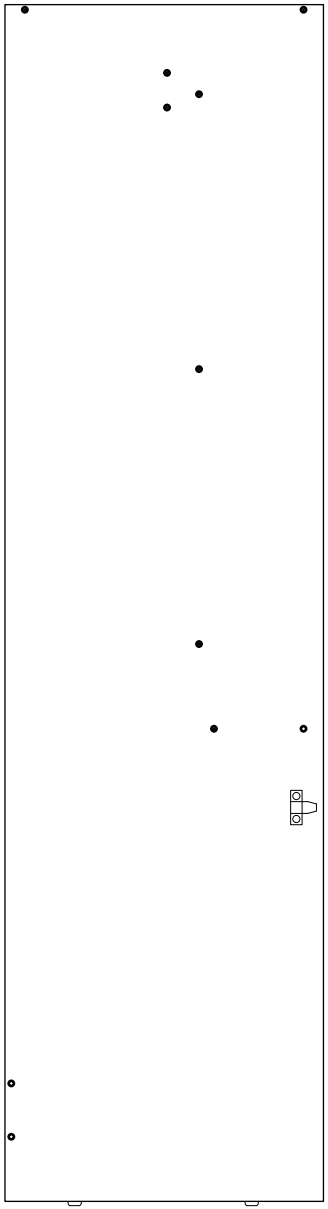

RIGHT SIDE
attach male KEKU clips using EURO screws and QUARTER-TURN PEGS as shown

STEP 1: ATTACH HARDWARE TO SIDE PANELS

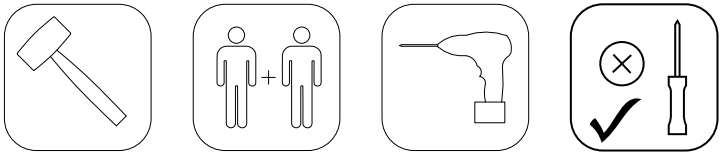

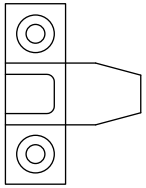

x 2



x 22

x 4

INSTRUCTIONS:

QUARTER-TURN PEGS (x 18) - ATTACH 18 QUARTER-TURN PEGS IN THE LOCATIONS SPECIFIED BY A BLACK DOT (9 PER PANEL)

MALE KEKU CLIPS (x 2) - THE MALE PORTION OF THE CLIPS ATTACH TO THE SIDE PANELS USING EURO SCREWS AS SHOWN

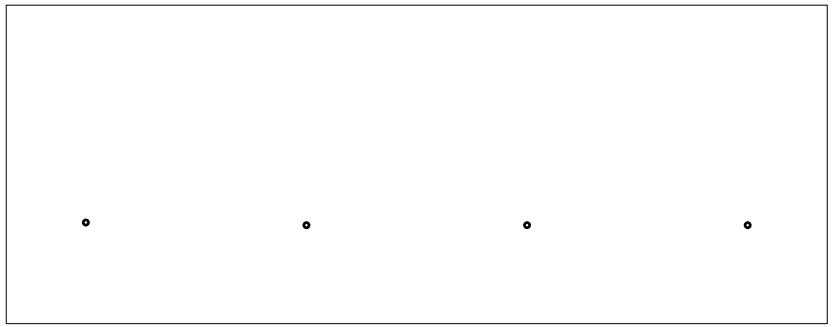

TOP PANEL - attach 4 QUARTER-TURN PEGS to the bottom side

FRONT SHELF - attach 4 QUARTER-TURN PEGS to the top side

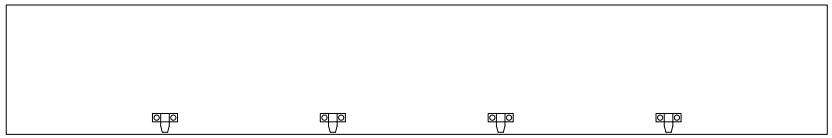

FRONT SHELF - attach 4 male KEKU clips to the bottom side

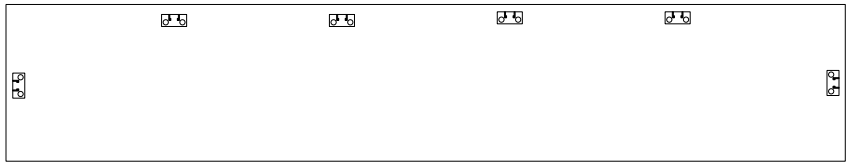

HEADBOARD - attach 6 female KEKU clips to the inside

FACE/SKIRT - attach 4 female KEKU clips to the inside

BASE PANE

STRAP SUPPORT BEAM

STEP 2: ATTACH HARDWARE TO REMAINING PANELS

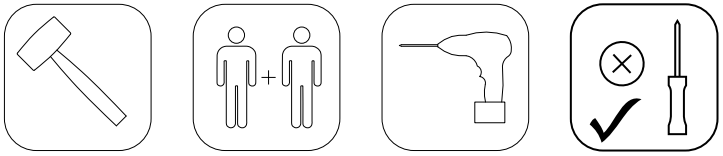

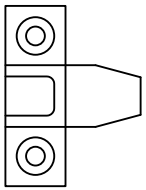

x 4



x 10



x 8

x 28

INSTRUCTIONS:

QUARTER-TURN PEGS (x 8) - ATTACH 8 QUARTER-TURN PEGS IN THE LOCATIONS SPECIFIED BY A BLACK DOT (4 ON TOP PANEL, 4 ON FRONT SHELF PANEL)

MALE KEKU CLIPS (x 4) - ATTACH THE MALE PORTION OF THE CLIPS TO THE BOTTOM OF THE FRONT SHELF USING EURO SCREWS AS SHOWN

FEMALE KEKU CLIPS (x 10) - ATTACH THE FEMALE PORTION OF THE CLIPS TO THE HEADBOARD AND FRONT FACIA/SKIRT USING EURO SCREWS AS SHOWN

STEP 3: ATTACH FRONT SHELF TO SIDE PANELS

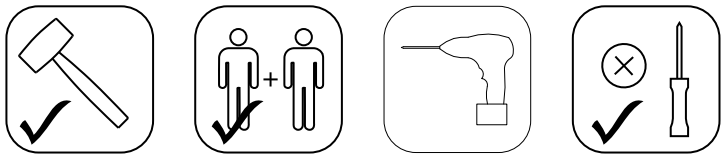

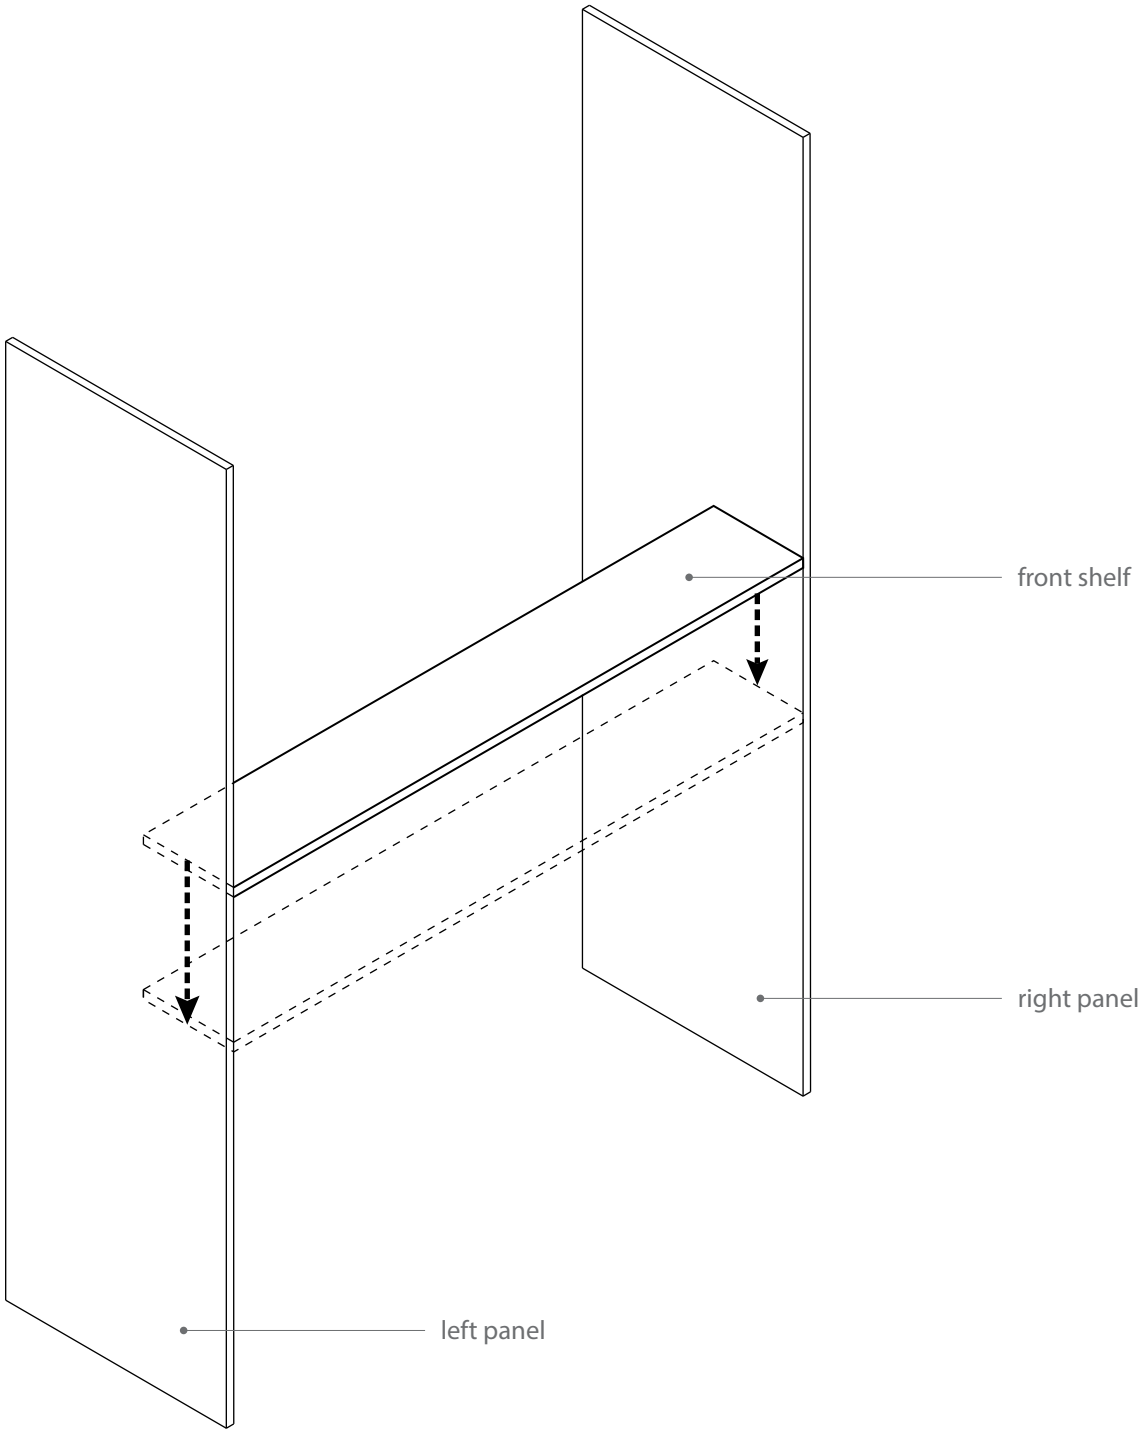

INSTRUCTIONS:

WHILE HOLDING THE PANELS UPRIGHT, CAREFULLY SLIDE THE FRONT SHELF BETWEEN THE TWO, MAKING SURE THAT IT IS ABOVE THE QUARTER-TURN ATTACHMENTS. PUSH THE SHELF DOWN INTO PLACE (YOU MAY NEED TO TAP THE SHELF WITH THE MALLET TO SECURE IT IN PLACE). TIGHTEN THE FASTENERS WITH YOUR SCREWDRIVER

NOTE: A SECOND PERSON IS REQUIRED FOR THIS STEP

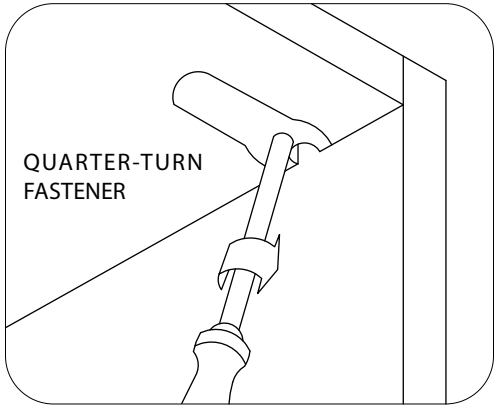

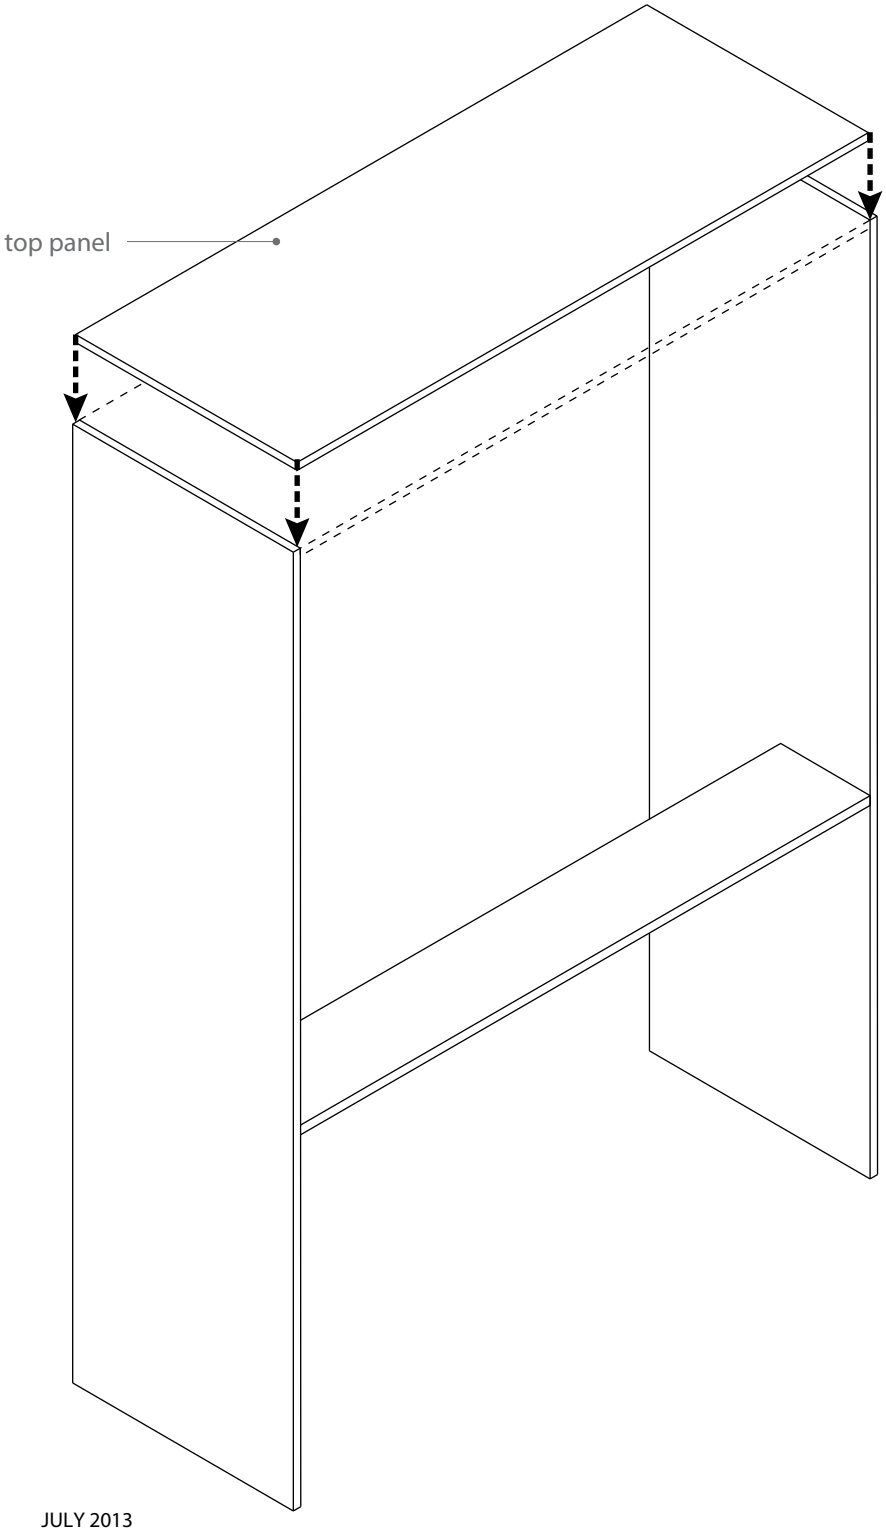

STEP 4: ATTACH TOP PANEL

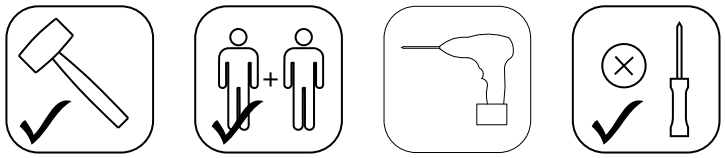

INSTRUCTIONS:

WHILE HOLDING THE PANELS UPRIGHT, CAREFULLY SLIDE THE TOP PANEL DOWN, MAKING SURE THAT IT LINES UP TO THE QUARTER-TURN ATTACHMENTS. PUSH THE PANEL DOWN INTO PLACE (YOU MAY NEED TO TAP THE SHELF WITH THE MALLET TO SECURE IT IN PLACE). TIGHTEN THE FASTENERS WITH YOUR SCREWDRIVER

NOTE: A SECOND PERSON IS REQUIRED FOR THIS STEP

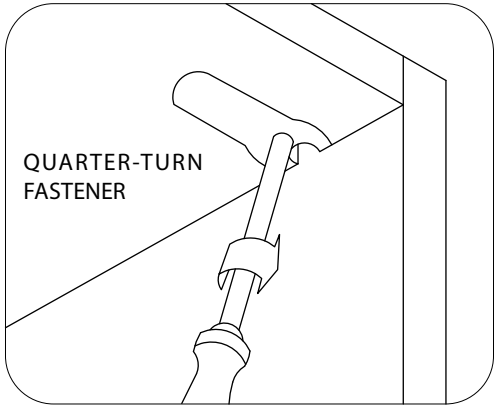

STEP 5: ATTACH THE DROP STRETCHER

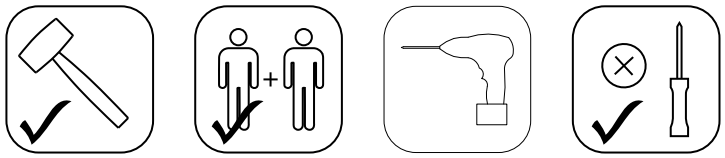

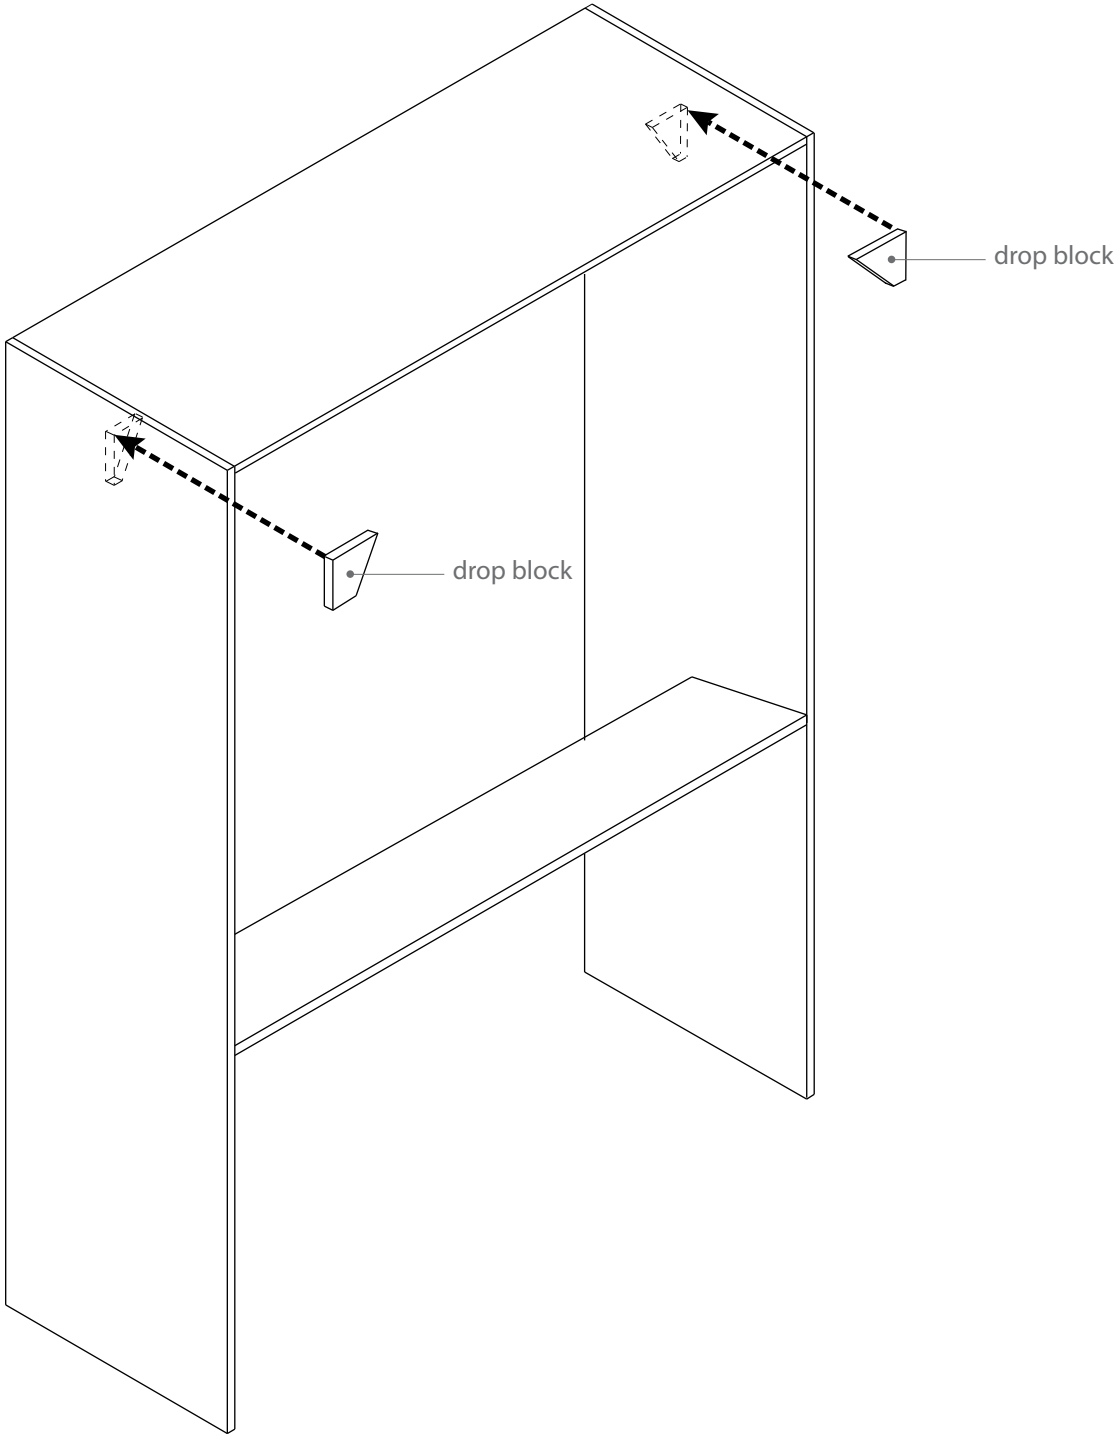

INSTRUCTIONS:

WHILE HOLDING THE PANELS UPRIGHT, CAREFULLY SLIDE THE DROP BlOCK INTO THE CABINET, MAKING SURE THAT IT LINES UP TO THE QUARTER-TURN ATTACHMENTS. PUSH THE STRETCHER INTO PLACE (YOU MAY NEED TO TAP IT WITH THE MALLET TO SECURE IT IN PLACE). TIGHTEN THE FASTENERS WITH YOUR SCREWDRIVER

NOTE: A SECOND PERSON IS REQUIRED FOR THIS STEP YOU WILL HAVE TO TEMPORARILY REMOVE THIS PIECE FROM BEHIND THE CABINET TO REACH THE QUARTER-TURN FASTENERS IN THE TV PANEL (NEXT STEP)

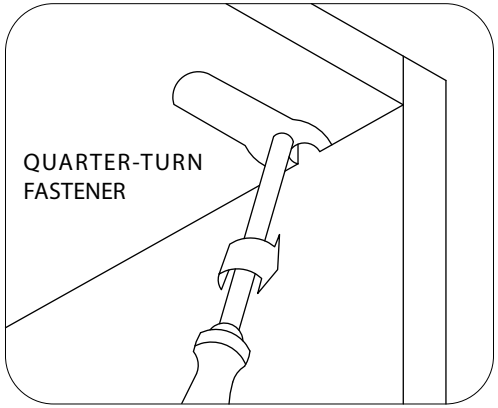

STEP 6: ATTACH THE TV PANEL

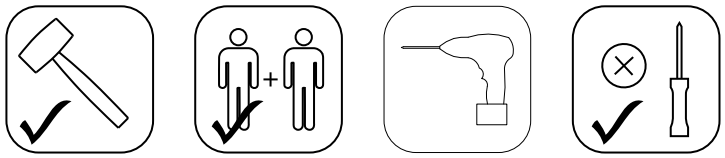

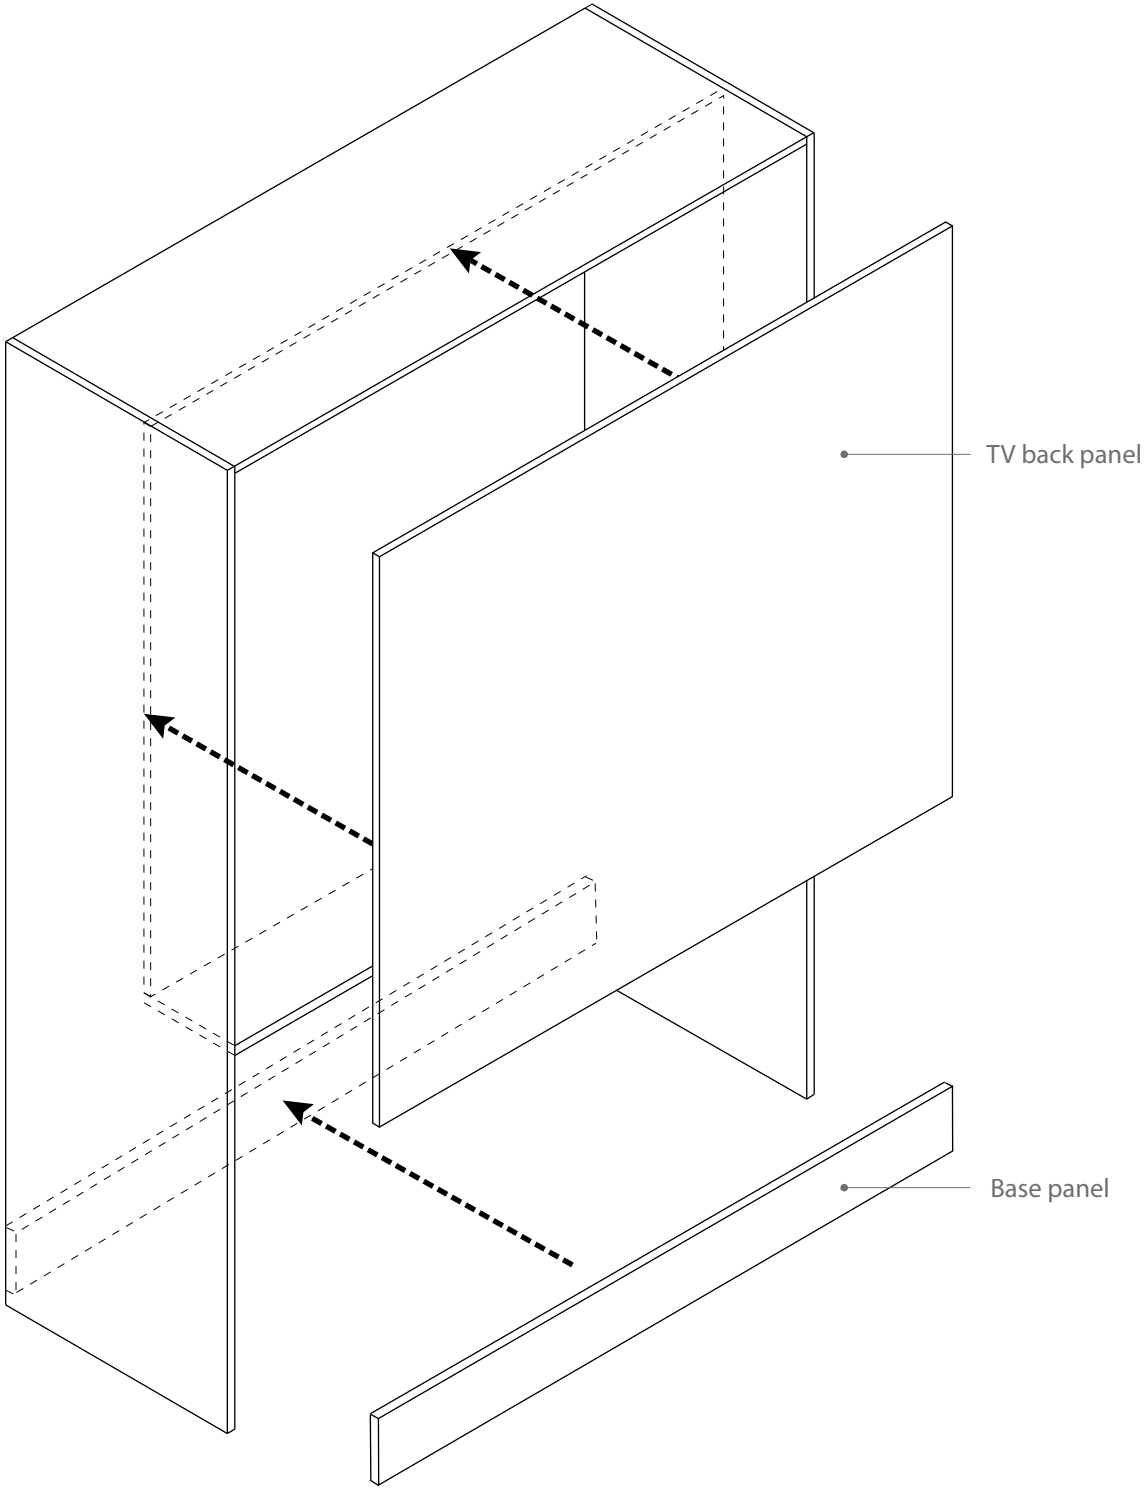

INSTRUCTIONS:

WHILE HOLDING THE PANELS UPRIGHT, CAREFULLY SLIDE THE TV PANEL BETWEEN THE SIDE PANELS FROM THE FRONT OF THE UNIT, MAKE SURE THE TOP OF THE TV PANEL PASSES THE QUARTER-TURN CONNECTORS FIRST, THEN SLIDE THE BOTTOM OF THE TV PANEL INTO PLACE (YOU MAY NEED TO TAP IT WITH THE MALLET TO SECURE IT IN PLACE). TIGHTEN THE FASTENERS WITH YOUR SCREWDRIVER

NOTES: A SECOND PERSON IS REQUIRED FOR THIS STEP
FROM BEHIND THE CABINET, REMOVE THE DROP BLOCKS TO GET TO THE FASTENERS

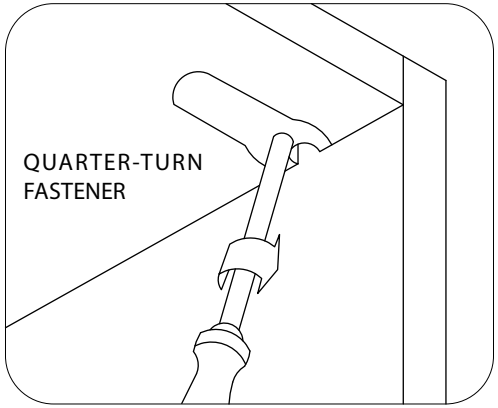

STEP 7: ATTACH LOWER BOLSTERS

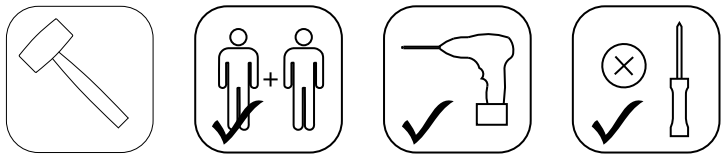



x 12

1 1/4" SCREW

INSTRUCTIONS:

POWER DRILL - USE YOUR POWER DRILL TO MAKE SURE THE HOLES ON THE BOLSTERS GO ALL THE WAY THROUGH

1 1/4" SCREWS (x 12) - ATTACH THE LOWER BOLSTERS USING THE 1 1/4" SCREWS (6 PER BOLSTER). MAKE SURE THE BOLSTERS ARE PROPERLY FLUSH WITH THE FLOOR, FRONT, AND BACK OF THE CABINET

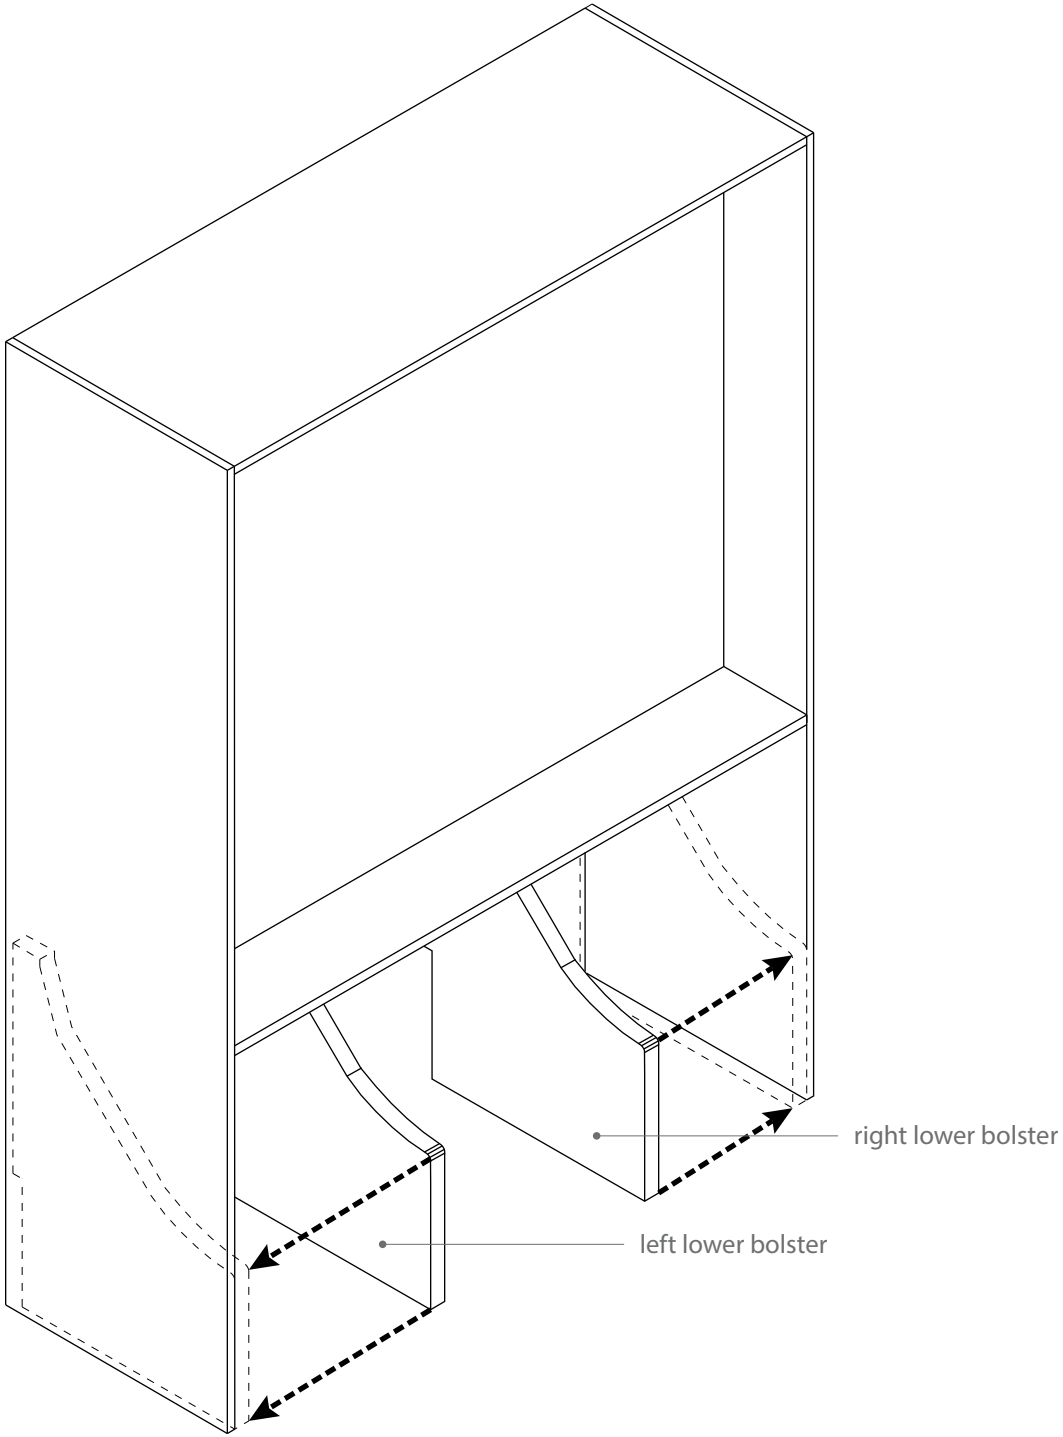

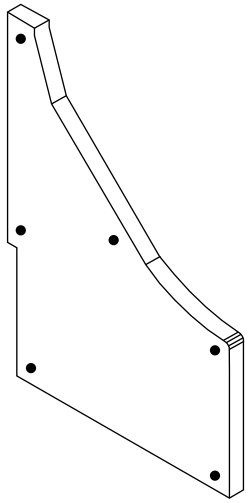

PRE-DRILLED HOLES

STEP 8: ATTACH UPPER BOLSTERS

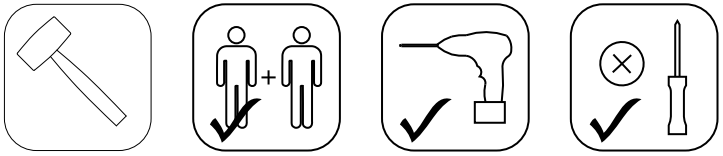



INSTRUCTIONS:

POWER DRILL - USE YOUR POWER DRILL TO MAKE SURE THE HOLES ON THE BOLSTERS GO ALL THE WAY THROUGH

2" SCREWS (x 10) - ATTACH THE UPPER BOLSTERS USING THE 2" SCREWS (5 PER BOLSTER). MAKE SURE THE BOLSTERS ARE PROPERLY FLUSH WITH THE BACK AND TOP PANEL OF THE CABINET

NOTE: TV PANEL, FRONT SHELF, TOP PANEL, AND DROP STRETCHER NOT SHOWN

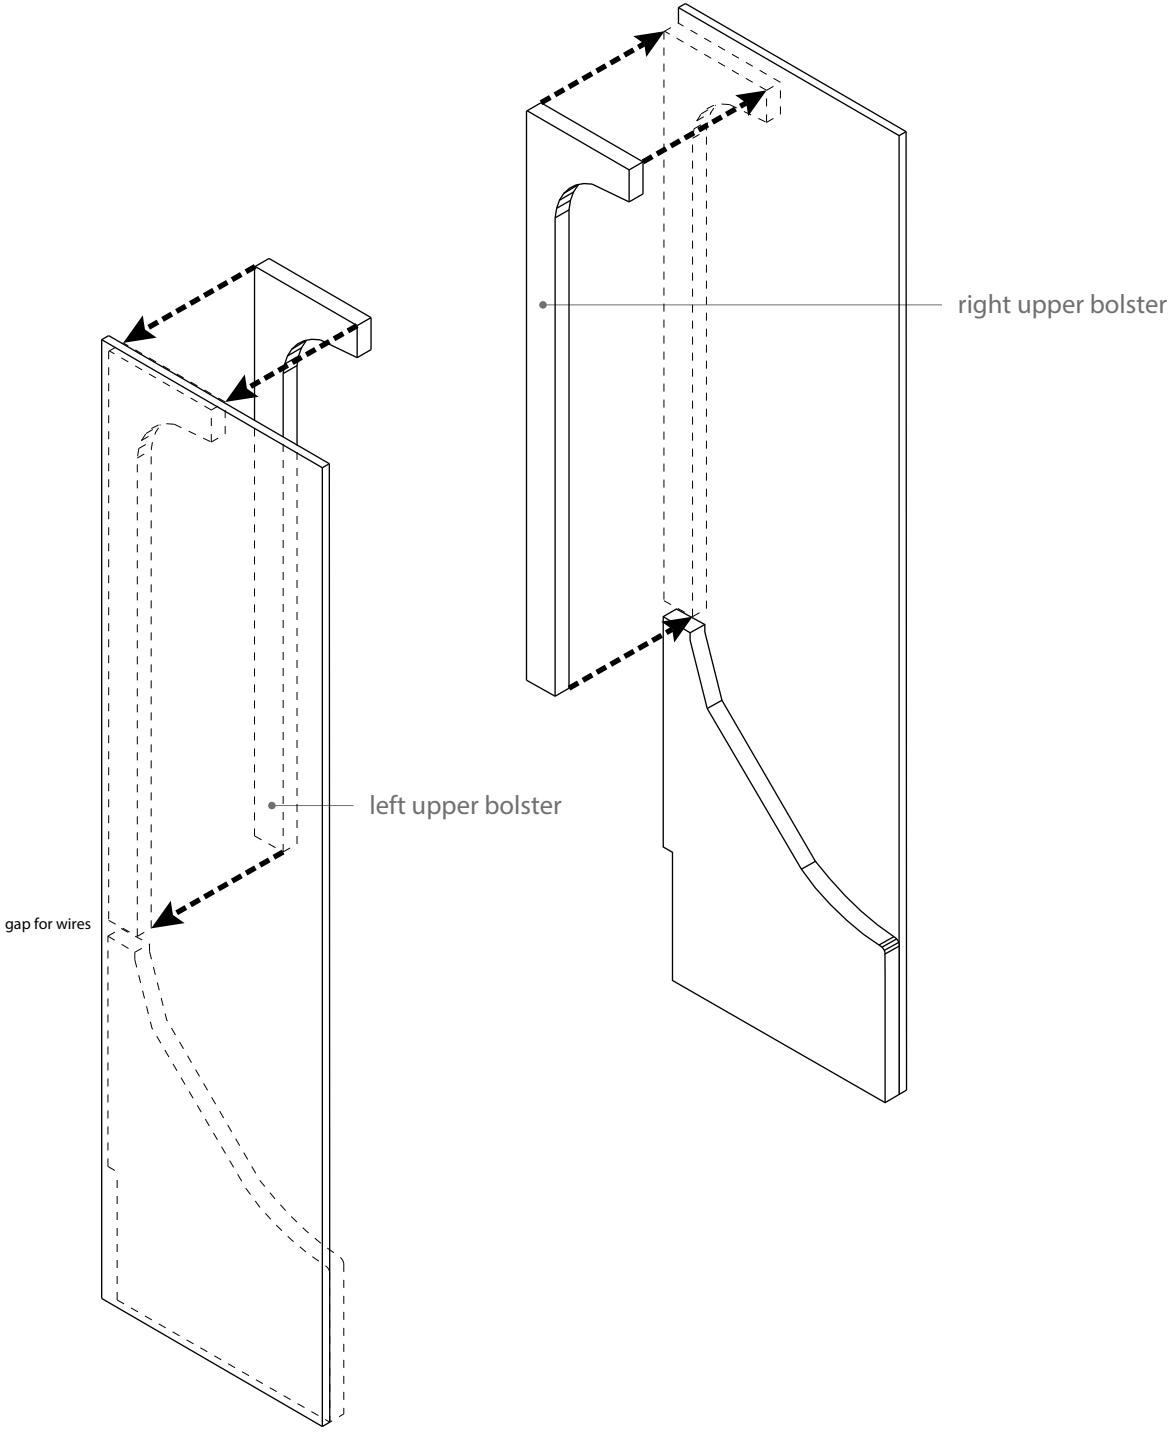

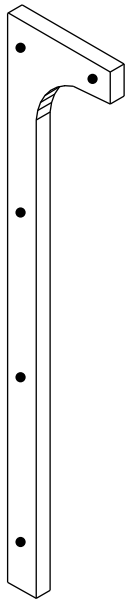

PRE-DRILLED HOLES

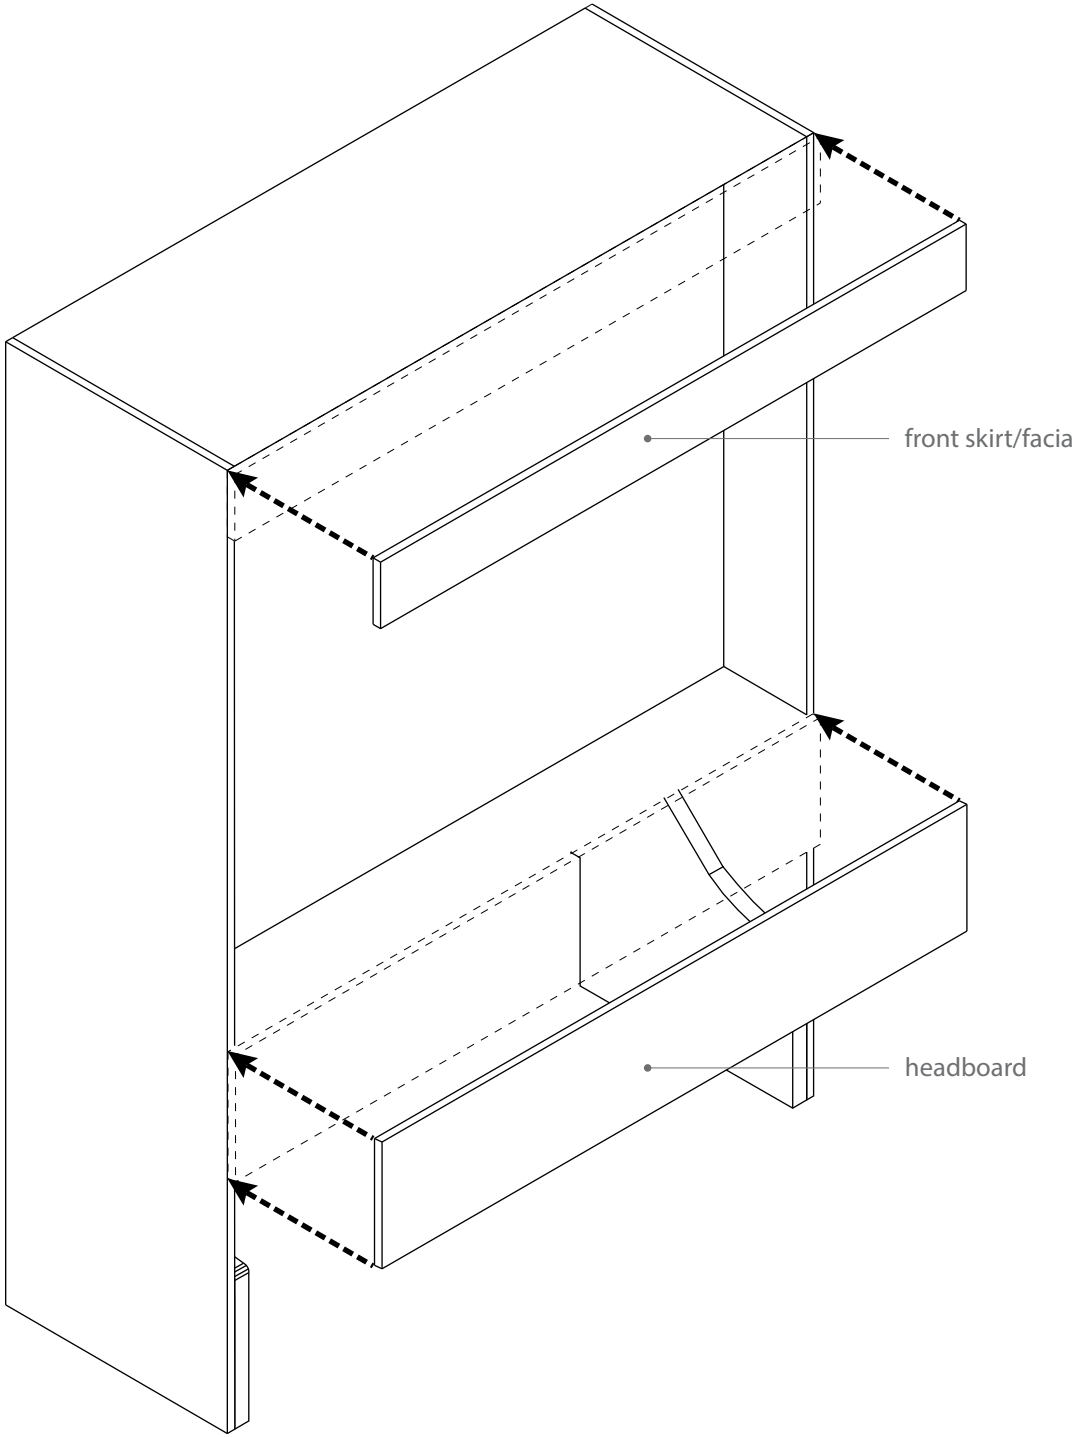

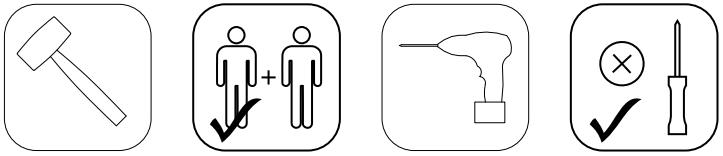

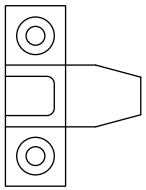

x 4

x 8

INSTRUCTIONS:

MALE KEKU CLIPS (x 4) - ATTACH THE MALE PORTION OF THE CLIPS TO THE BOTTOM OF THE TOP PANEL USING EURO SCREWS

AFTER ALL KEKU CLIPS ARE PROPERLY SECURED TO THE TOP PANEL, FRONT FACIA/SKIRT, AND HEADBOARD, GENTLY PUSH THEM INTO PLACE UNTIL THE MALE AND FEMALE KEKU CLIPS CLICK TOGETHER

NOTE: YOU WILL HAVE TO REMOVE THE HEADBOARD WHEN INSTALLING THE ZOOM-ROOM BED MECHANISM

KEKU clip detail

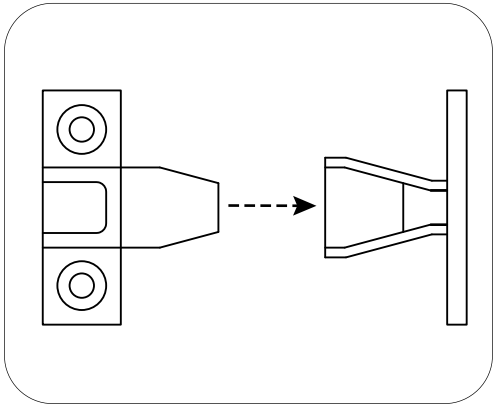

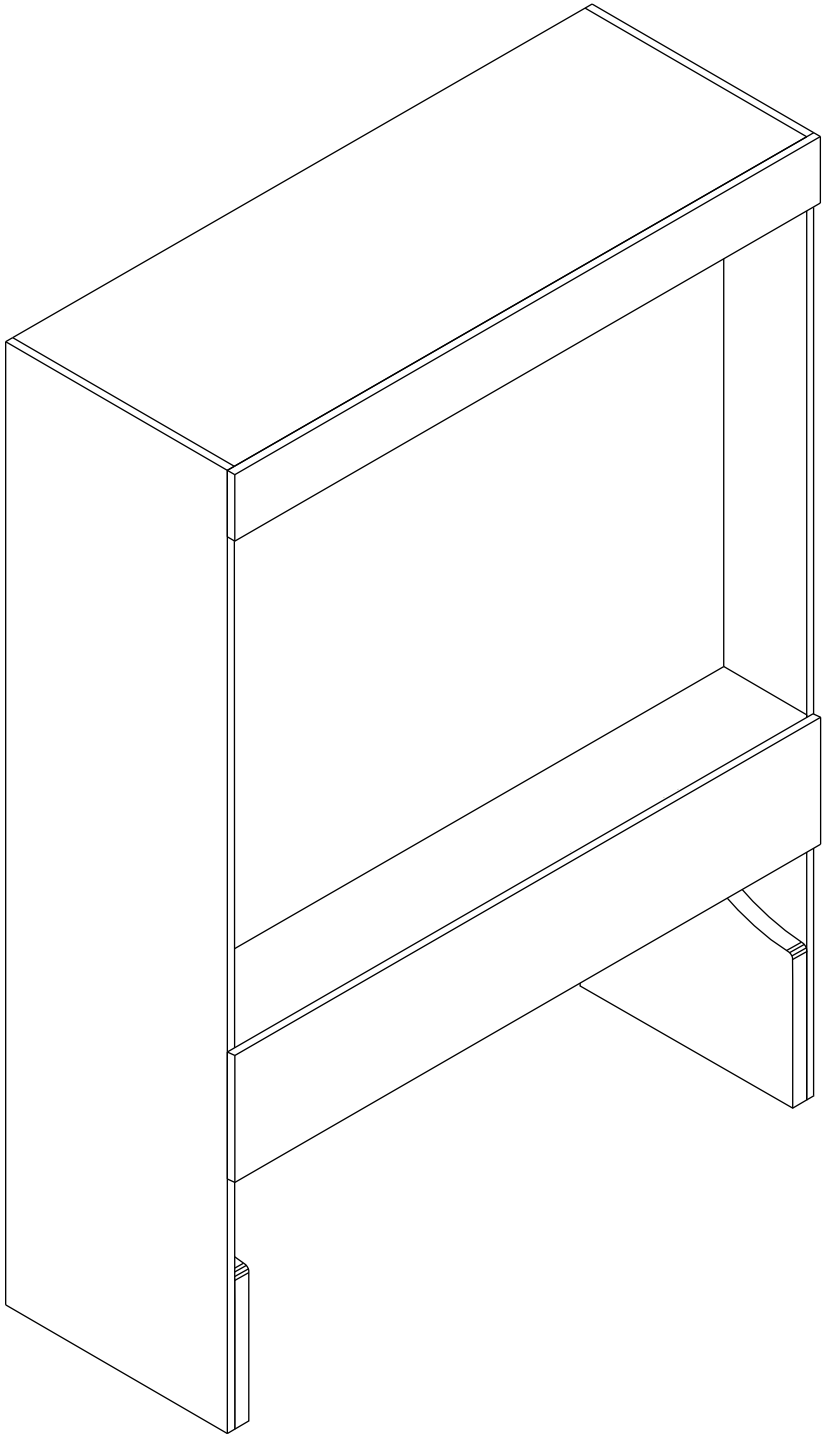

STEP 10: ATTACH FOOTBOARD SUPPORT BEAM

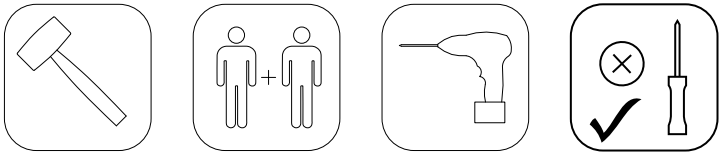



INSTRUCTIONS:

2" SCREWS (x 5) - ATTACH THE FOOTBOARD SUPPORT BEAM USING THE 2" SCREWS. MEASURE 2" DOWN FROM THE TOP OF THE FOOTBOARD AND CENTERED
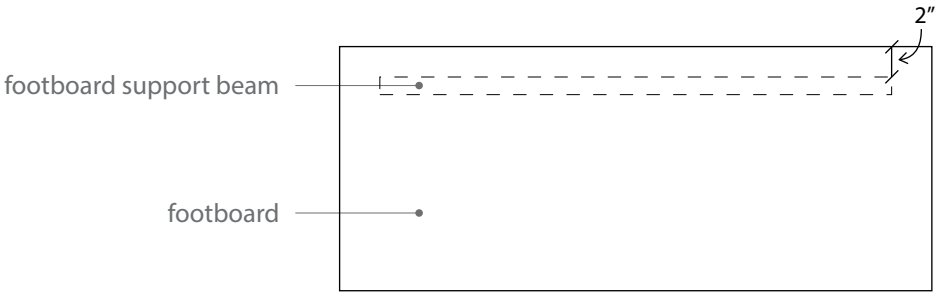
NOTE: THE FOOTBOARD PANEL WILL BE INSTALLED TOGETHER WITH THE ZOOM-ROOM BED MECHANISM